



# SETTING UP THE 5648F

Make sure to place your fountain on a firm area which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

1) Set bottom two stone pieces in place. Set pump in bowl and run power cord down through bowl and pedestal. With help, tip bowl and pedestal in order to pull out end of cord and run toward your power supply.


2) Open the slit in the rubber stopper, place around the power cord and close, then push down into place in the bowl's center hole.

3) Build pump and tube assembly as shown at right.

4) Set 7648 Pedestal over pump assembly.

5) Insert adapter under the 5648 Top. Pull tube up through 7648 Pedestal and push onto the 5648's adapter before setting the 5648 down.

6) Fill bowls with water. Read pump instructions. Turn on the pump. If it does not immediately begin working, there may be an "airlock" within the impeller chamber. Simply unplug and plug in a few times and it should start. If you want

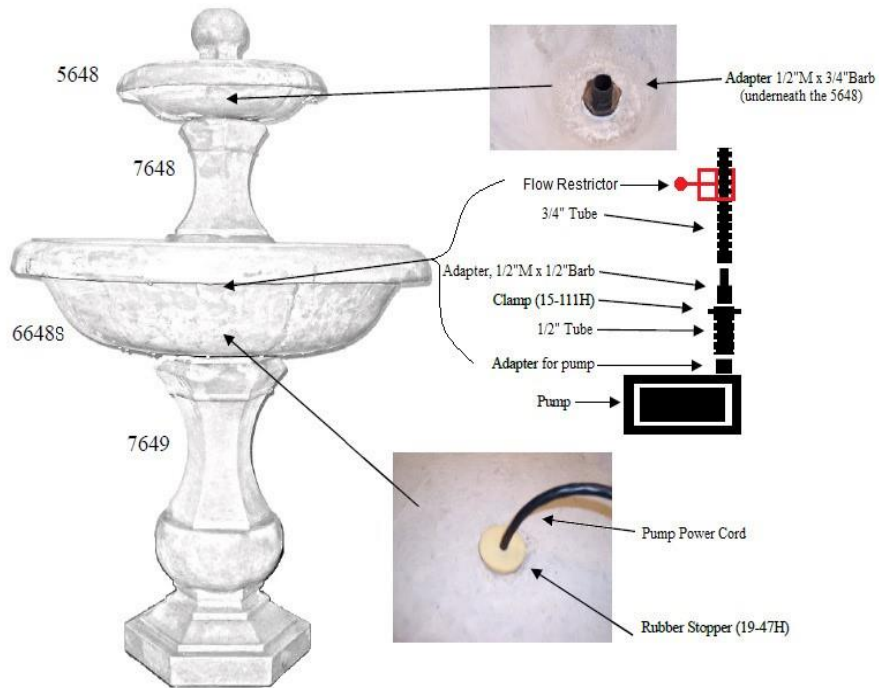

to reduce the water flow  
you can tighten the flow  
restrictor. Csd

**IMPORTANT – WINTER CARE**

Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- \* Disconnect power to pumps and lights.
- \* Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- \* Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- \* Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

7/2020

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.