

MODEL: SL0285
CERAMIC FROG FOUNTAIN
ASSEMBLY INSTRUCTIONS
READ AND SAVE THESE INSTRUCTIONS


UNPACK THE PACKAGE

YOU SHOULD HAVE RECEIVED LISTED PARTS:


1PC FROG,
 1PC BOWL,
 1PC WATER HOSE,
 2PC RUBBER BUNG,
 1PC PUMP,
 1PC SOLAR PANEL,
 1PC SOLAR PANEL BRACKET,
 1PC SOLAR PANEL POST,
 1PC GROUND SPIKE.

TO PROTECT THE PRODUCT, PLACE ALL ON A SOFT SURFACE BEFORE ASSEMBLY.

1. THERE IS A SMALL HOLE IN THE BACK OF THE BOWL THAT THREADS THE PUMP CABLE OUT OF THE HOLE. (Note: a small rubber bung is provided to cover the cable hole, so that the bowl can be filled up with water)

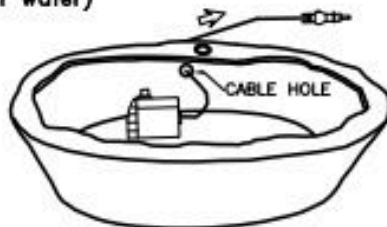

2. FIRSTLY, ATTACH THE WATER HOSE TO THE PUMP, THEN ATTACH THE FROG TO THE WATER HOSE AS DIAGRAM BELOW.

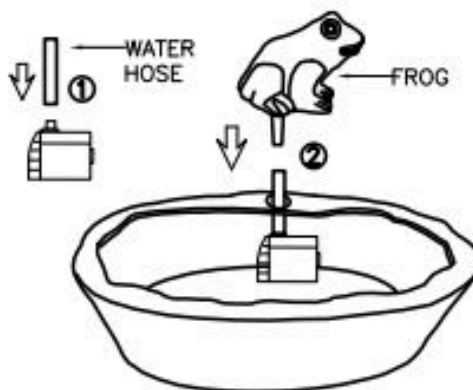


3. USE A PROVIDED BIGGER RUBBER BUNG TO SECURE THE FROG TO THE BOWL.




4. ADD APPROPRIATE AMOUNT OF WATER IN THE BOWL.




5. JOIN BRACKET, SOLAR PANEL POST AND SPIKE TOGETHER, THEN ATTACH BRACKET TO BACK OF THE SOLAR PANEL AS SHOWN.

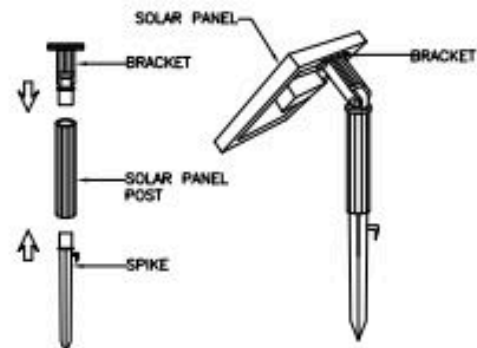

6. TWIST PUMP PLUG SLIGHTLY AND PUSHING IT INTO THE HOLE FOR PUMP PLUG, MAKE SURE THE SEALING RING IS FULLY IN GROOVE.

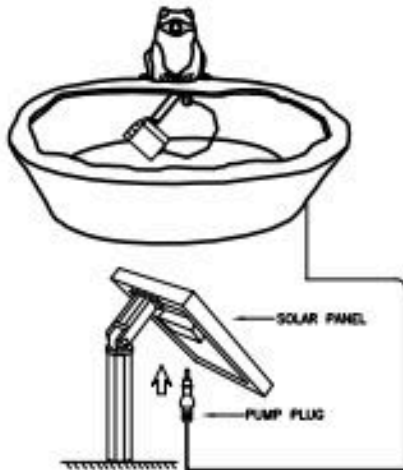

7. INSERT THE SPIKE INTO THE GROUND. POSITION THE SOLAR PANEL TO FACE SOUTH (In Northern Hemisphere) AS MUCH AS POSSIBLE TO MAKE THE MOST OF THE DAYLIGHT HOURS. IT IS IMPORTANT TO ANGLE THE SOLAR PANEL TO FACE SUN WHEN SUN IS AT ITS HIGHEST POINT. ENSURE THE SOLAR PANEL IS NOT SHADED BY TREES, SHRUBS OR BUILDINGS.

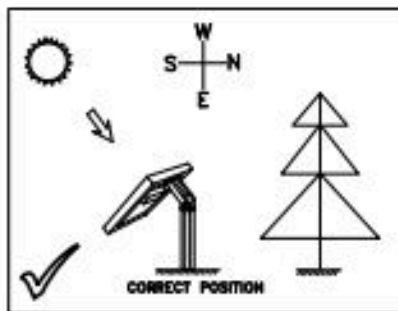

SOLAR PUMP FUNCTIONS:

THIS SOLAR PUMP IS DESIGNED PRIMARILY TO OPERATE IN SUMMER MONTHS BUT ALSO WORK IN SPRING AND AUTUMN PROVIDED THERE IS GOOD SUNSHINE.

THIS PUMP RUNS FROM DIRECT SUNLIGHT, PUMP PERFORMANCE DEPENDS THE AMOUNT AND STRENGTH OF SUNLIGHT RECEIVED BY SOLAR PANEL.

TROUBLE SHOOTING:

1. IF YOUR FOUNTAIN DOES NOT WORK, CHECK SOLAR PANEL IS IN CORRECT POSITION RECEIVING DIRECT SUNLIGHT AND NOT IN SHADOW.
2. CHECK CONNECTIONS BETWEEN THE PUMP AND THE SOLAR PANEL.
3. CHECK WATER LEVEL AND MAKE SURE THE PUMP IS FULLY SUBMERGED.
4. CHECK PUMP IMPELLER BLOCKED BY DEBRIS.
5. THE PUMP MAY BE "AIR LOCKED", PLUG AND UNPLUG THE PUMP SEVERAL TIMES TO CLEAR ANY AIR THAT MAY HAVE BEEN TRAPPED.

MAINTENANCE OF PUMP

IF YOU FIND THE PUMP START LOSING POWER OR STOP WORKING, CHECK THE PUMP FILTER AND IMPELLER BLOCKED, CLEAR WITH WATER.



WINTER PROTECT

INDOOR STORAGE IS RECOMMENDED IN WINTER.

WARRANTY