

Dancing Spheres Fountain (4307F2)

IMPORTANT – WINTER CARE


Winter ice build-up can cause damage to concrete statuary. Follow these tips to reduce winter weathering to your fountain:

- * Disconnect power to pumps and lights.
- * Remove plugs/stoppers in all fountain bowls to open drains and let all moisture out. Keep drains open throughout winter.
- * Cover with a Henri fountain cover. Keep tight and do not let snow or water collect in sagging areas.
- * Do not allow snow or ice to build up on or against the concrete. Remove snow before it turns to ice. Do not use antifreeze, salt or chemical ice removers as these may damage concrete.

Make sure to place your fountain on a firm and level surface which will not settle. Note: Always follow local electrical codes and use a 110V GFCI protected outlet. Do not let children climb on fountain.

Caution: The use of Chlorine or Chlorine Bleach or water coloring additives may damage the finish of your fountain.

Questions? Email
ProductSupport@HenriStudio.com

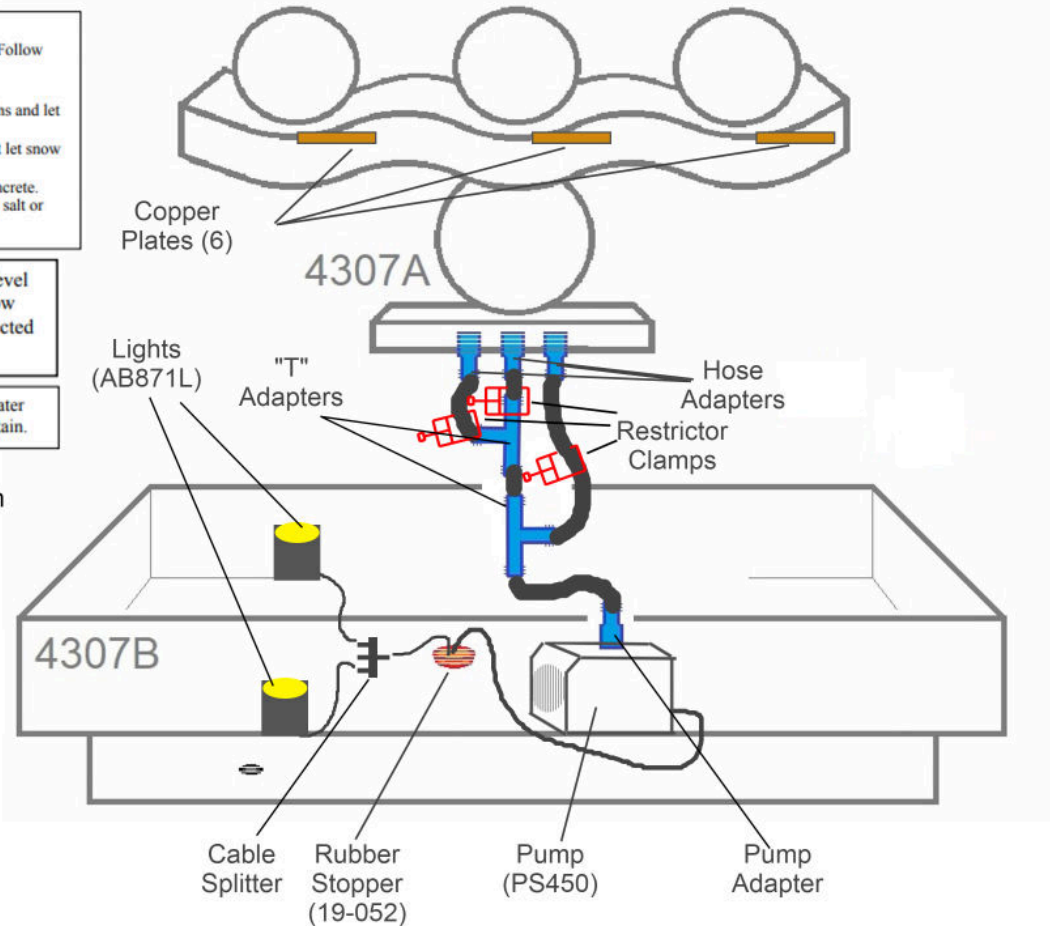

- 1) Place lights in basin, connect lights to the light splitter. Connect the extension cable to the light splitter. Run the light cable through the hole in the basin, and underneath the basin.
- 2) Place pump in basin. Run the pump cable through the hole in the basin, and underneath the basin.
- 3) Install the rubber stopper in the hole in the basin, peeling it apart to place around the pump and light cables. Push down far enough that no more than 1/4" of the stopper is protruding above the concrete.
- 4) Screw hose adapters into the bottom of the 4307A.
- 5) Install plumbing exactly as outlined in the diagram, paying special attention to the orientation of the "T" adapters. Be sure to install the restrictor clamps on their respective hoses before pressing the hoses onto the adapters.
- 6) Install the copper plates in their respective places using the included silicone caulk. Bend each plate slightly to match the curve of the surface. Three plates are used on each side of the 4307A, for a total of six. Use a single, continuous bead under each plate. Ensure the plates protrude over the edge of the concrete by at least 1/4".
- 7) Fill and run the fountain. Use the restrictor clamps to reduce/balance flow as necessary.