


TRIPLE LOTUS BOWL FOUNTAIN HC3500

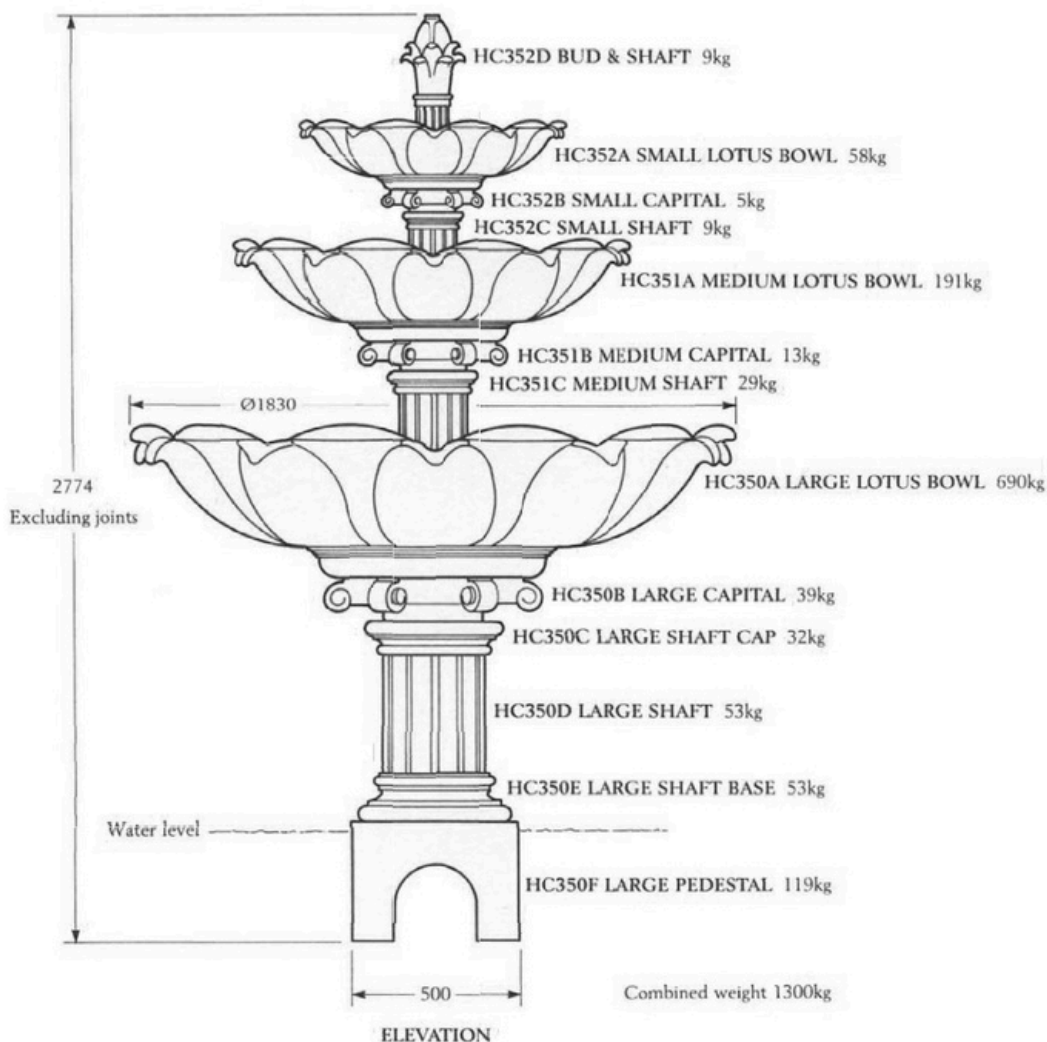

INSTALLATION RECOMMENDATIONS

It is essential that a step ladder, fork lift truck or similar is used when installing, cleaning or maintaining the fountain. Under no circumstances should any downwards pressure be exerted on the rim of the fountain bowls (for example, by leaning a ladder against a fountain bowl). It is also essential that temporary support is provided for the HC350A bowl during construction. For security and additional safety, it is recommended that pedestal components HC350B, C, D, E, F are fixed together using a proprietary polyester or epoxy adhesive.

The joint between the small and medium shafts and their respective Lotus Fountain Bowls should be filled with a waterproof mastic. Also apply waterproof mastic to the joint between the copper pipe and Fountain Bud HC352D.

Unless otherwise stated, all materials other than stonework to be supplied by others.

BEDDING JOINTS - Use 1:1:6 cement/lime/sand mortar

We recommend a water proofing agent is added to mortar.

It is essential that the HC350F Large Pedestal is levelled on a continuous mortar bed.

Foundations designed by others to suit site conditions and loadings.

POINTING - Joints should be pointed using our proprietary pre-prepared dry mix in accordance with the recommended instructions printed on bags.

Or use 1:1:6 cement/lime/sand mortar colour-toned to suit (white cement may be necessary).

Allow 6mm for bedding joints.

Read in conjunction with tech-sheet F71.