



FT-380 Mondrian Fountain, Tall Assembly Instructions



Fountain Information:

- Two people are recommended for the installation of this fountain!
- This fountain holds approximately 10 gallons of water.
- This fountain uses a large fountain cover: FTNCOV-LG
- Compatible with #10 Refill Device and LED kit
- A special stopper is required to use the refill kit for this fountain

Pump Information:

OEMPF525 - 525 GPH Pump (16 ft. cord length)

Tools Required:

Bubble Level
Screwdriver
Safety
Gloves



Proudly
MADE IN USA

Fountain Components			
Image	Item Description	Component Item #	Quantity
	Mondrian Fountain - Pump Cover	FT-379C	1
	Modrian Fountain, Tall - Spiller Stop	FT-380A	1
	Mondrian Fountain, Tall - Water Feature	FT-380B	1
	Mondrian Fountain, Tall - Basin	FT-380D	1
	Mondrian Fountain, Tall - Base	FT-380E	1

Pump Kit Parts List		
Image	Component	Quantity
	PK 500 (use adapter indicated)	1
	#10 Stopper	1
	Tubing Assembly #1	
	8" length of 1/2" black non-kink tubing	1
	1 1/2" length of 5/8" clear-tubing	1
	Tubing Assembly #2	
	12" length of 1/2" black non-kink tubing	1
	1 1/2" length of 5/8" clear tubing	2
	Copper mesh (FT-379CP)	1
	Copper spillers (FT-379SPL) front view	3
	Blue Matala filter square	3
	Silicone	1
	Wedges	2
	Hose Clamps	3

rev 10/11/2023

FT-380 Mondrian Fountain, Tall Assembly Instructions

Two people are recommended for the installation of this fountain!

Fountain Set-Up:


Assembly & Installation - A fountain can be difficult to install without knowing and understanding the steps involved. To ensure your fountain is installed properly, please read our instructions and tips before you begin.

Step 1 - Seek Professional Help: Check if professional installation is recommended for your fountain.

Step 2 - Check Foundation: Place your fountain on a level surface. It is recommended to place your fountain on concrete or a hard packed gravel pad. If the base is level but some components seem off, rotate components or use wedges to level them.

Step 3 - Create a Drip Loop: To prevent water from dripping down the cord and damaging the electrical socket, create a drip loop by allowing the pump power cord to fall below the wall outlet.

Step 4 - Use a GFCI Outlet: Use only a GFCI outlet when running a fountain.

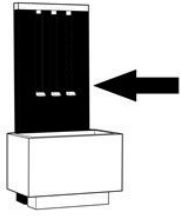


FT-380B (269 lbs)
23"L x 7.5"W x 52"H

380B) placing it into position where the fountain will be installed.

1a - NOTE - If placing against a wall leave enough space to pass your arm behind it. The fountain can be moved back after pump installation is completed and the cord has been run behind the fountain.

Step 2 – Line the base (FT-380E) up with the sides of the water feature. There should be about 2-3 inches of space between the two pieces.

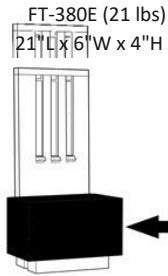

FT-380E (21 lbs)
21"L x 6"W x 4"H

FT-380D (232 lbs)
27"L x 16"W x 15"H

Step 3 - Center the basin (FT-380D) in front of the water feature (FT-380B) and on top of the base (FT-380E), but do not fit into water feature yet.

3a – There is a slight bevel/slant to one side of the basin. This is the side that will fit into the water feature (FT-380B).

Step 4 - Assemble the pump kit:

4a - The pump comes with 3 adapters. Use only the smallest adapter provided.

4b - Using a hose clamp, attach the 1/2" non-kink end of Tubing Assembly #1 to the pump outlet.

4c - Place the stopper around the pump cord approximately 6" from the pump.

Step 5 - Feed the pump cord through the large hole in the back of the basin (FT-380D).

Step 6 - FIRMLY press the stopper into the hole evenly.

Step 7 – Use a hose clamp to secure the loose end of Tubing Assembly #1 to the CPVC pipe protruding out on the inside the basin (FT-380D).

Step 8 – Use hose clamps to secure one end of Tubing Assembly #2 to the CPVC pipe in the back of the basin (FT-380D) and the other end to the pipe in the top of the cut out in the back of the feature (FT-380B).

Step 9 – Lift the basin (FT-380D) into position in the water feature (FT-380B).

9a - NOTE – The basin will only go up to a 1/4" inside water feature hole.


Step 10 - Check sides of basin so that gaps on both sides against water feature are even.

Assemble your fountain on a level surface capable of holding a minimum of 640 lbs with an approximate 1.25 sq. ft. footprint (actual dimensions 21"L x 13.5"W).

Step 1 - Stand up the water feature (FT-

FT-380 Mondrian Fountain, Tall


Assembly Instructions

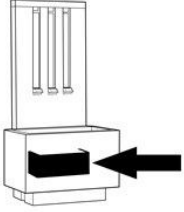

FT-379C (22 lbs)
11.5"L x 6.5"W x 7"H


Step 11 - Place pump cover (FT-379C) around the pump and the cord. Be sure that it is centered under the three spouts in the water feature (FT-380B).

Step 12 – Carefully place the copper mesh (FT-379CP) into the recess at the top of the pump cover (FT-379C).

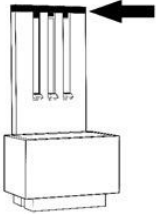

FT-380A (12 lbs)
21"L x 3.75"W x 3"H

Step 13 – Place the spiller stop (FT-380A) on top of the water feature (FT-380B). The square parts in the bottom of the spiller stop should sit into the square holes at the top of the water feature.

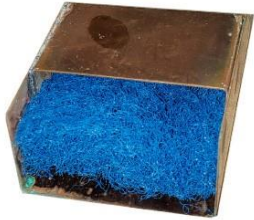

Installing the spillers

Step 14 – Insert a blue Matala filter square into each spiller (FT-379SPL). See figure A (back view).

Step 15 – Use the silicone provided to secure the spillers into the spillways on the water feature (FT-380B).

Note – For best results when installing spillers, apply two heavy, constant beads of

Fig. A

silicone spaced slightly apart on the bottom / outside of the side walls. Press the spiller securely into the fountain's spillway and gently wipe away any excess silicone with a damp (not wet) cloth or towel.

Note – More silicone can be used after the spillers are secure and dry to fill any gaps between the spillers and the water feature.

Step 16 - Let the fountain sit 24 hours before filling with water to let the silicone dry completely.

TROUBLESHOOTING NOTE: If water is seen running down the wall of the water feature, let the fountain dry completely and check for gaps between the spillers and the water feature. Also, a thick bead of silicone can be used to fill the gap where the water feature and basin meet.

Maintenance:

Pump Care - The fountain relies heavily on the quality of the pump. A well-maintained pump can last several years.

Step 1 - Fully submerge: Ensure the pump is fully submerged at all times to avoid damage.

Step 2 - Ensure water level is sufficient: Check water levels regularly as water may evaporate over time, and periodically change water to avoid algae buildup.

Step 3 - Clean pump: Use soap and water, or white vinegar and water, with a small, soft brush to clean the pump of debris, dirt, and algae buildup. This should be done every 2-3 months.

Surface Care - Paints and finishes may fade over time due to weathering. By following these tips, you will be able to maintain your fountain's surface.

Step 1 - Control Algae and White Scale: Due to water evaporation, you may see white residue on your fountain surface from the mineral content in your water supply. Algaecides and cleansers can help prevent buildup that occurs from minerals and hard water.

Step 2 - Protect and Refinish: Depending on the material of your fountain, protectants and sprays may prolong the appearance of the surface. Paint and refinishing kits can be used for touch-up.

Winter Care - Many materials used to produce fountains can expand and contract in different temperatures/humidity levels. If the temperature falls below 32°F or humidity levels change drastically, follow the steps below to protect your fountain.

Step 1 - Bring inside: If possible, bring your outdoor fountain inside for the winter.

Step 2 - Store in dry location: If unable to bring inside, store your fountain in a dry and covered location.

Step 3 - Bring components inside: Move all internal components (stoppers, tubing, lights, pump, etc) inside. *A pump can stay in a fountain for the winter, but if you choose to leave it in, it must be completely dry and insulated with plastic bags and towel to ensure it stays dry. However it is recommended to bring it inside.*

Step 4 - Completely drain: It is important to prevent water from accumulating anywhere, as freezing and thawing of water can cause pump damage and cause cracks to form in your fountain. Remove the drain plugs.

Step 5 - Elevate Fountain: Fountains may freeze to the ground and cause cracking in the base if left outside in the winter. If unable to store inside or in a dry covered location, try to raise your fountain above ground.

Step 6 - Cover Fountain: Make sure to use a breathable material when covering. **DO NOT COVER IN PLASTIC!** Make sure the fountain cover is taut so that no snow or water can pool in the cover. Tie the opening at the bottom of the cover around the fountain.

Troubleshooting:

Pump Not Working - When operating the pump for the first time, it can take a few minutes before water begins to flow properly. If it is still not working after a few minutes, please follow our troubleshooting tips below. **Before troubleshooting, UNPLUG YOUR PUMP.** **Step 1 - Submerge Pump:** Ensure your pump is fully submerged in water at all times to avoid pump damage.

Step 2 - Manual Check: If the pump cover is removable, try removing the cover to access the impeller area. Turn the rotor to ensure it is not broken or jammed.

Pump Noise - Some sound from the pump may be normal, but you can follow these tips to reduce sound or resolve abnormal noises.

Step 1 - Submerge Pump: Ensure your pump is fully submerged at all times and clean of debris, dirt and algae buildup.

Step 2 - Check Location: You may hear the vibration of the pump touching the side walls of the fountain. Make sure the pump is only touching the bottom. **Step 3 - Check Flow Rate:** Too low of a flow rate might cause spews or burps.

Water Flow Rate - Some fountains come with a dial or valve to adjust the flow rate, but if you do not have this option or if you are still unsatisfied with your flow rate after changing the settings, check out our tips below.

Step 1 - Adjust the Water Level: Insufficient water levels can affect water intake by the pump. Check the fountain instructions to ensure the appropriate water capacity for your fountain.

Step 2 - Check for Kinks: Check to make sure the tubing is not kinked. Kinks in the tubing can slow or halt the flow of water.

Step 3 - Clamp the Hose: To slow the water flow, try clamping the hose with a hose clamp or zip-tie.

Splashing - Having trouble with splashing? Some splashing is inevitable, especially when you first turn on your fountain, but if you are experiencing excessive splashing, try our troubleshooting tips below.

Step 1 - Adjust the Water Level: Ensure the pump is fully submerged, but avoid overfilling your fountain.

Step 2 - Flow Rate: If your pump includes a dial or valve to adjust the flow rate, try changing the settings to see if it affects splashing. If your pump is not adjustable, check our Flow Rate section to learn about other ways to change the flow rate.

Step 3 - Adjust Position: Try arranging stones or placing a splash guard, at the fountain base. You can also place a screen in the basin.

Leaking - If your fountain is leaking, check these quick tips on how to fix it.

Step 1 - Adjust the Water Level: Your fountain may leak if it is too full.

Step 2 - Check Tubing: Check that the tubing is attached completely and correctly.

Step 3 - Check Stopper: Ensure stopper is completely seated in the fountain. You can also use 100% pure clear silicone to ensure a proper seal is achieved **Step 4 - Cracking:** Your fountain may be cracked from improper winter care; see Winter Care in Maintenance Tips.